


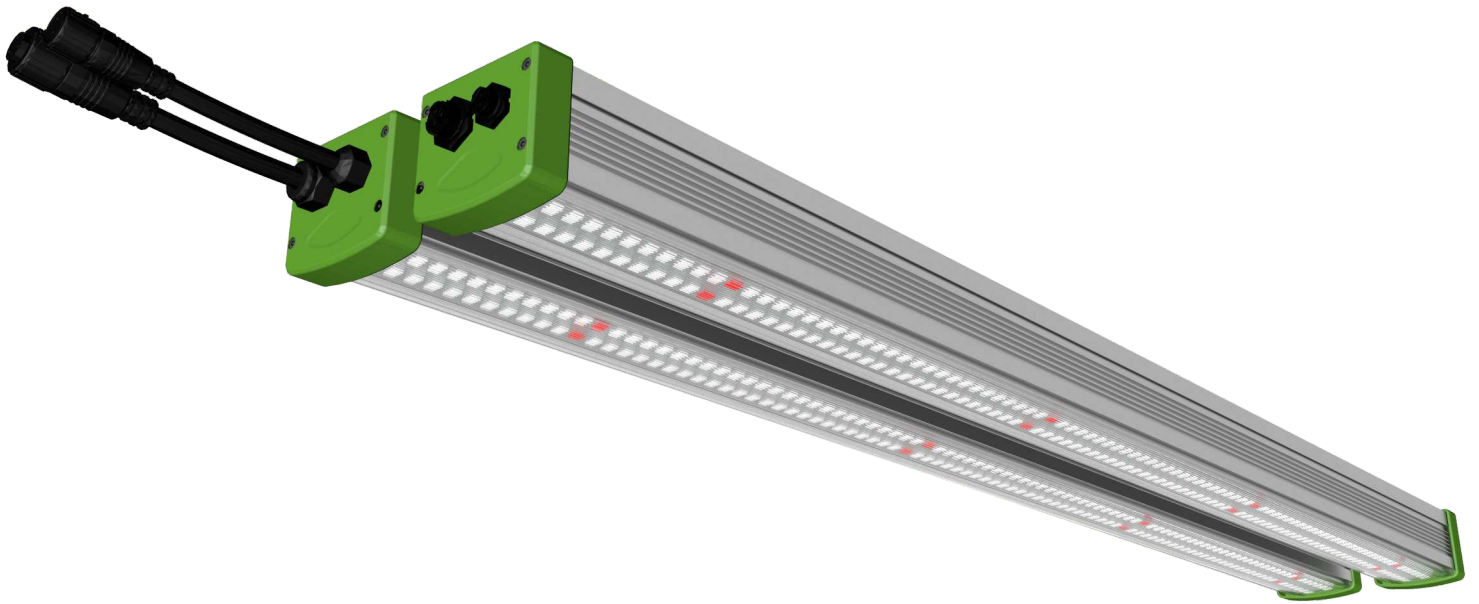


MarsEVOL

Quick Installation Guide

SOLIFY UNI



BEFORE INSTALLATION

 
 **Important information**
Read carefully

This guide explains how to install SOLIFY UNI. All warnings and cautions should be followed. Installation must be performed by qualified electricians in accordance with national and local electrical and building laws.



INSTALLATION INSTRUCTIONS

N. American


2pin-DIM 3pin-AC




I. Suspension Using Stainless Steel Hooks - (N.American)

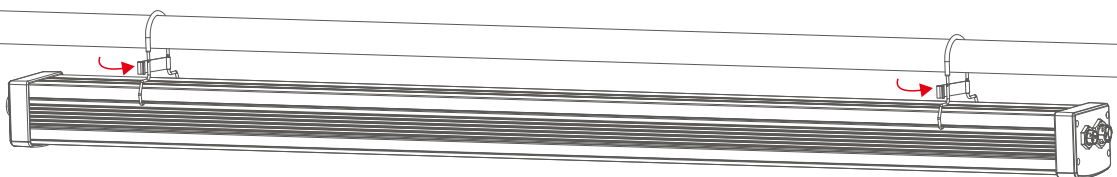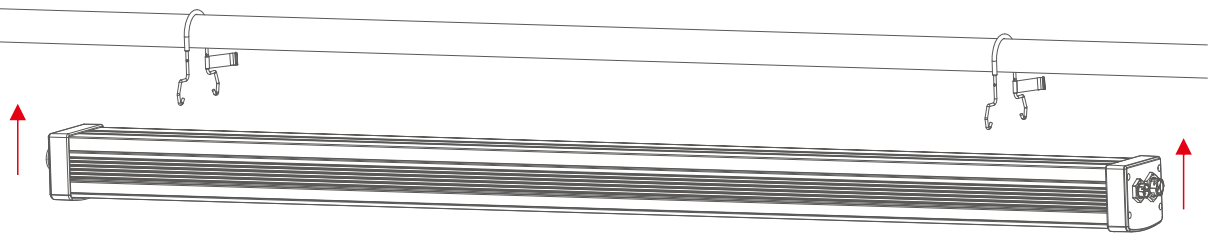


II. Adjustable Stainless Steel Suspension Cable Installation - (N.American)

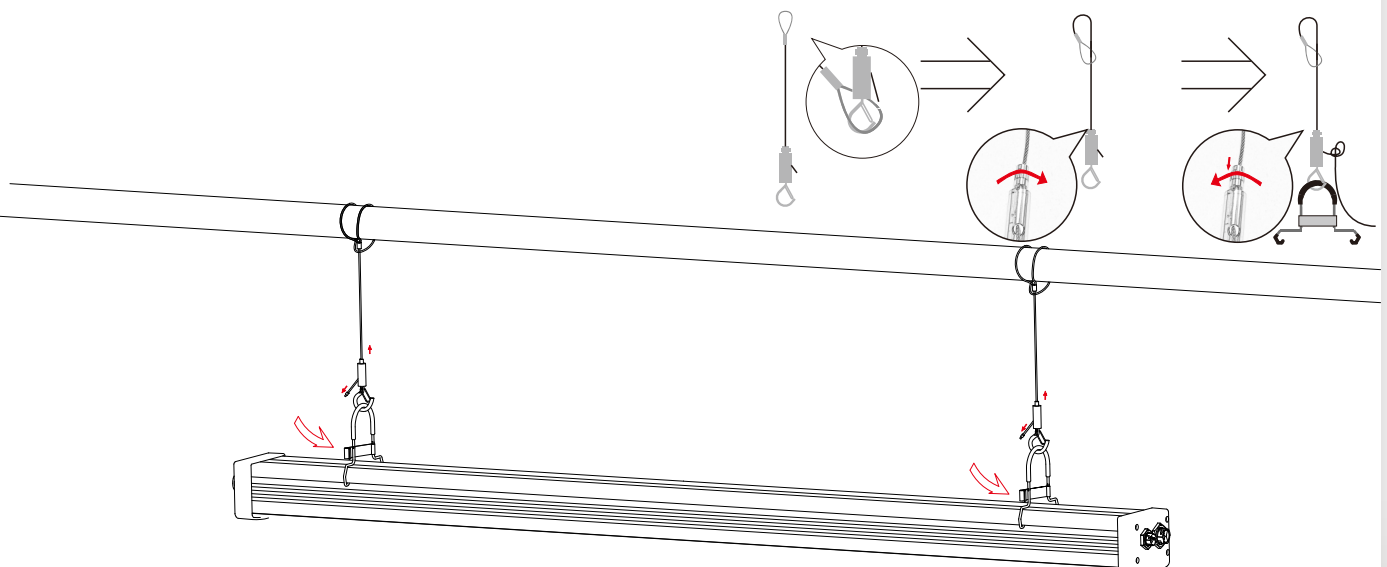

III . Power Supply (AC) & Dimming (DIM)Connections - (N. American)

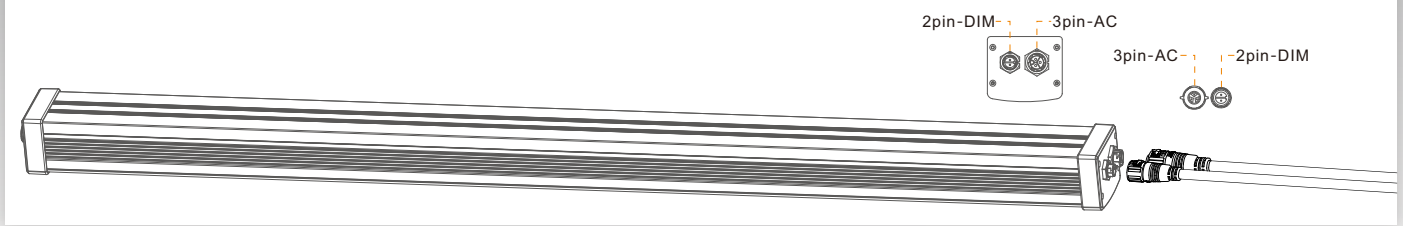

IV . Interconnection Cable Installation - (N. American)

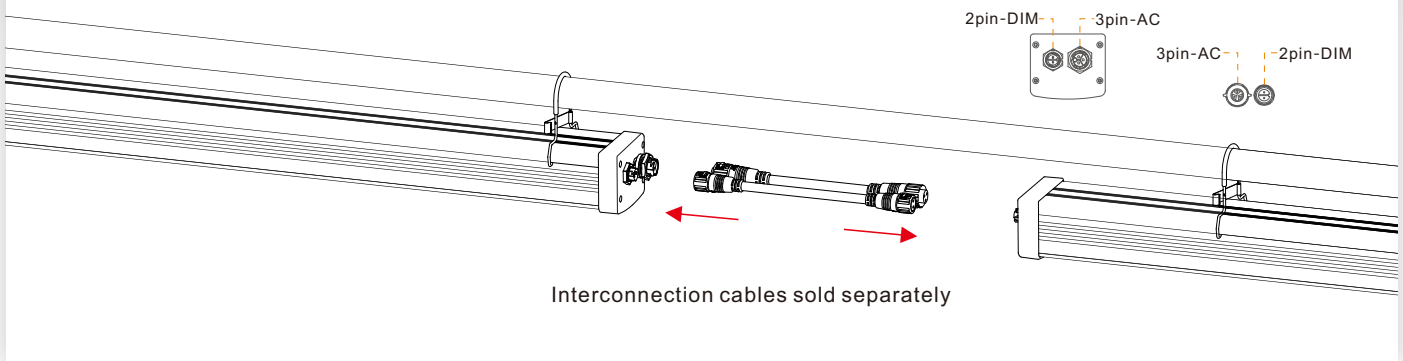

PARAMETER				MAX AMPERAGE BY VOLTAGE OVERVIEW				MAX CONNECTION QTY.			
Model No.	Power	Weight(kg)	BTU(100% power)	120V	208V	230V	277V	120V	208V	230V	277V
350-0001	190W	3.8	648.3	1.633A	0.938A	/	0.704A	6	12	/	14



IMPORTANT

- The lamp must be oriented with the light shining downward, and not upward or to the side. Damage to the lamp fixture caused by heat radiation when operated sideways or upside down is not covered by the warranty.
- Be sure that the hooks are installed securely to prevent the lamp from coming loose and falling.
- The light source (LEDs) are not serviceable or replaceable.
- Do not modify or alter the product as this will void the warranty.
- Do not turn on the power until installation is completed.
- Use a junction box with IP level IP66.
- Disconnect the power supply before installation. Installation must be performed by qualified electricians in accordance with national and local electrical and building codes.
- Adjust the length of the lifting ropes before installation. If adjustment is needed after installation is complete, disconnect the power supply and remove the fixture from the lifting ropes before making adjustments. Do not attempt to adjust the lifting ropes with the fixture attached.



The lamp fixture is a high-power device. Do not touch the lamp while it is operating. Before touching the lamp for any reason, disconnect the power supply and allow the lamp fixture to cool down completely.



SECONDARY RISK: Do not look directly at the light source to avoid eye damage or discomfort due to the brightness of this lamp fixture.

BEFORE INSTALLATION

 
 **Important information**
Read carefully

This guide explains how to install SOLIFY UNI. All warnings and cautions should be followed. Installation must be performed by qualified electricians in accordance with national and local electrical and building laws.

INSTALLATION INSTRUCTIONS



European Standard

3pin-AC — 2pin-DIM





European Standard


I . Suspension Using Stainless Steel Hooks - (EU)

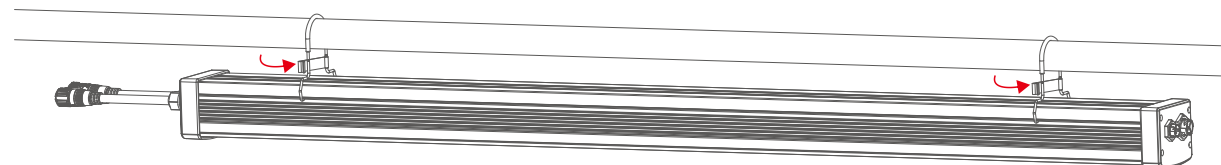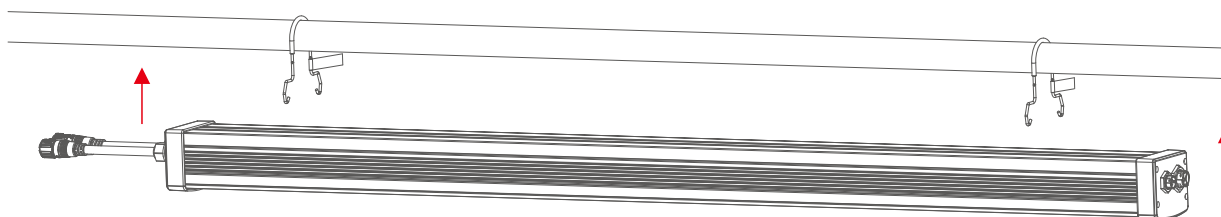


II . Adjustable Stainless Steel Suspension Cable Installation - (EU)

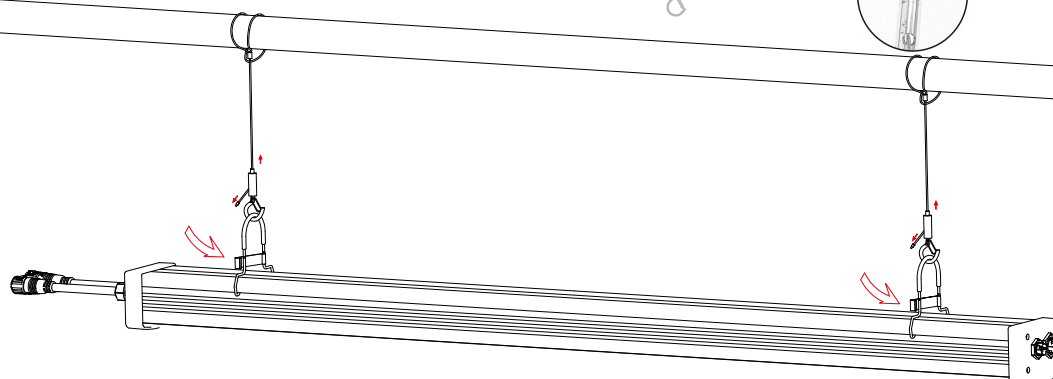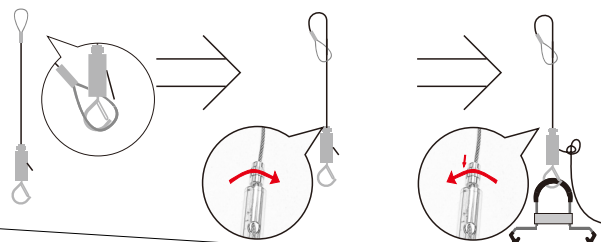

III . power supply (AC) & Dimming (DIM)connections - (EU)

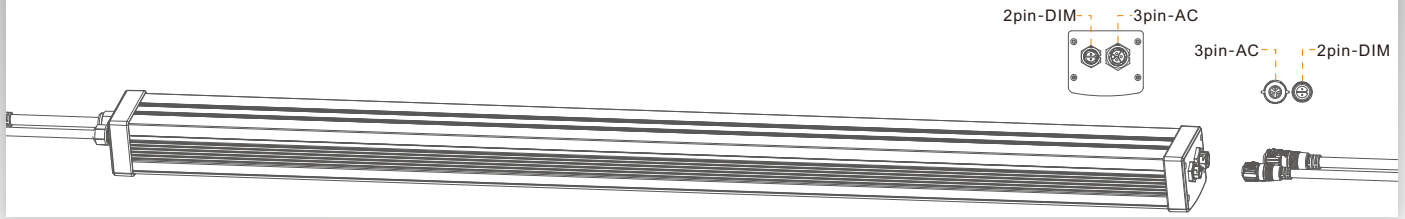

IV . Interconnection Cable Installation - (EU)

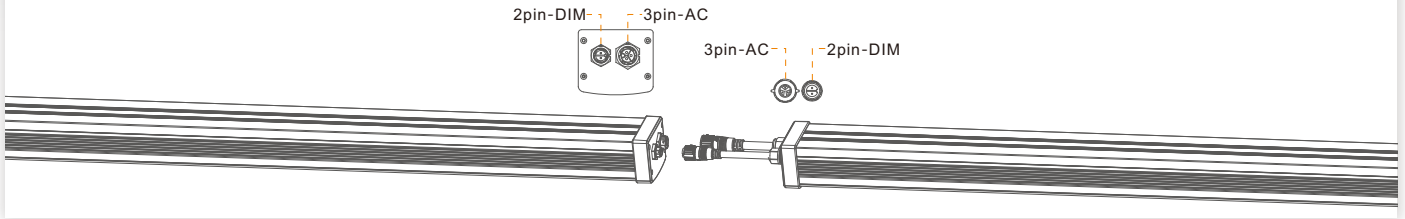

Model No.	PARAMETER			MAX AMPERAGE BY VOLTAGE OVERVIEW				MAX CONNECTION QTY.			
	Power	Weight(kg)	BTU(100% power)	120V	208V	230V	277V	120V	208V	230V	277V
350-0010	190W	3.8	648.3	/	/	0.848A	/	/	/	11	/
350-0012	190W	3.8	648.3	/	/	0.848A	/	/	/	11	/



IMPORTANT

- The lamp must be oriented with the light shining downward, and not upward or to the side. Damage to the lamp fixture caused by heat radiation when operated sideways or upside down is not covered by the warranty.
- Be sure that the hooks are installed securely to prevent the lamp from coming loose and falling.
- The light source (LEDs) are not serviceable or replaceable.
- Do not modify or alter the product as this will void the warranty.
- Do not turn on the power until installation is completed.
- Use a junction box with IP level IP66.
- Disconnect the power supply before installation. Installation must be performed by qualified electricians in accordance with national and local electrical and building codes.
- Adjust the length of the lifting ropes before installation. If adjustment is needed after installation is complete, disconnect the power supply and remove the fixture from the lifting ropes before making adjustments. Do not attempt to adjust the lifting ropes with the fixture attached.



The lamp fixture is a high-power device. Do not touch the lamp while it is operating. Before touching the lamp for any reason, disconnect the power supply and allow the lamp fixture to cool down completely.



SECONDARY RISK: Do not look directly at the light source to avoid eye damage or discomfort due to the brightness of this lamp fixture.





MarsEVOL

LED-INNOVATION-PROFESSION

Copyright Reserved. Without the written permission of the copyright owner, duplicate this manual or part of the manual is prohibited.
Information provided here is not apart of any offer or contract. Our company believes the content is accurate and reliable.
Releasing this information is not meant to transfer or imply any patent certification or other industry or knowledge and intellectual property.

©Copyright 2022 MarsEVOL LIGHTING 2022-01
Subject to change without notice, Tolerance ±10%
Horticulture lighting | Not suitable for household illumination.

 www.marsevol.com
 info@marsevol.com