




**MarseVOL**




# HARVESTATION

## WIRING & INSTALLATION GUIDE

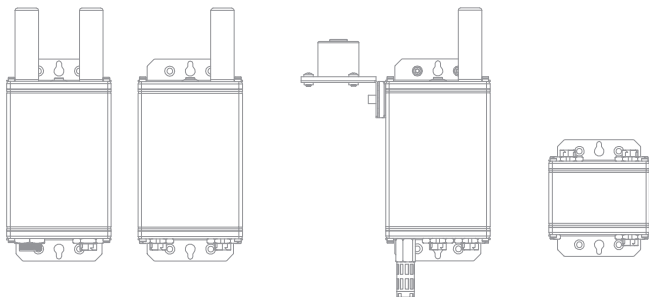

VERSION 2.0




# HOST CONTROLLER

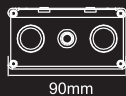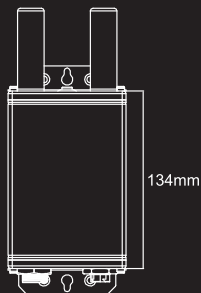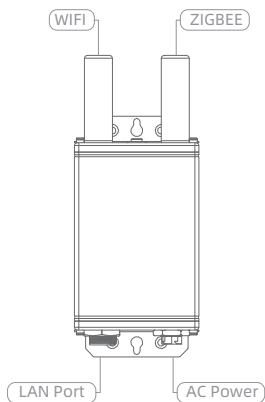



**MarseVOL**




# SINGLE-CHANNEL DIMMING CONTROLLER

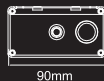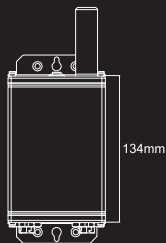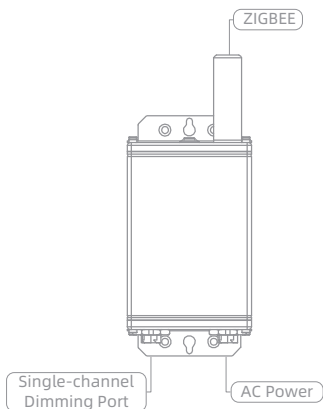



**MarseVOL**




# PAR DETECTOR

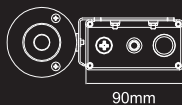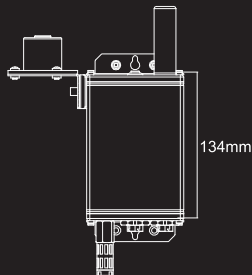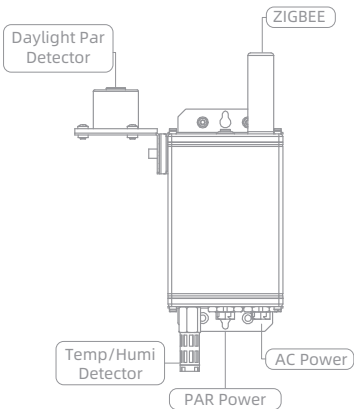



**MarseVOL**




# DIMMING AMPLIFIER

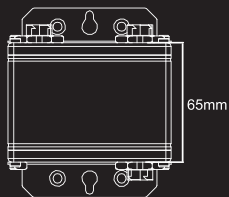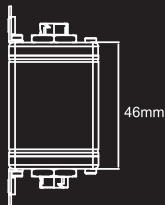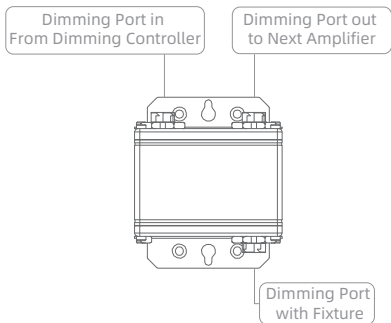





**MarsEVOL**


# MULTI-CHANNEL DIMMING CONTROLLER

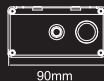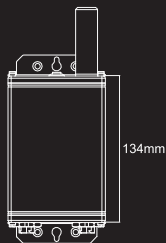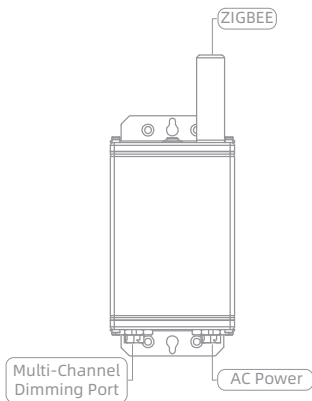


The accessory can be mounted and adjusted in multi ways

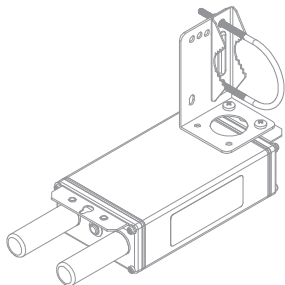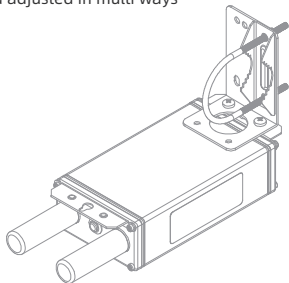

The diameter of U-bracket assembly is 30-50mm

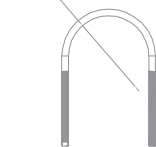


Rotation angle 32°

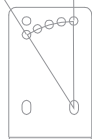

Picture I

Before mounting, make sure diameter of pole is 30-50mm  
The bracket can be rotated within 32 degree  
Adjust the screw on U-bracket assembly to fit the pole with sawtooth  
Adjustment way shows like picture I and II

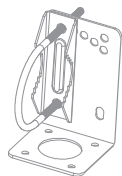



Picture II

First punch 2 holes where to mount the controller

Next thread expansion screw through the holes on Top and Bottom of the controller

Then mount the controller at the place

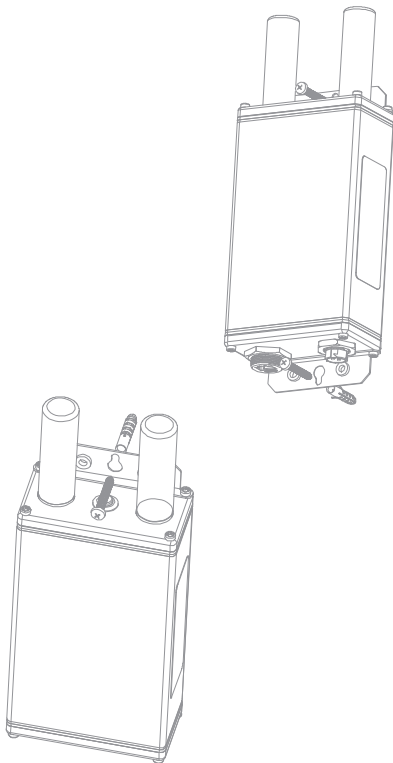

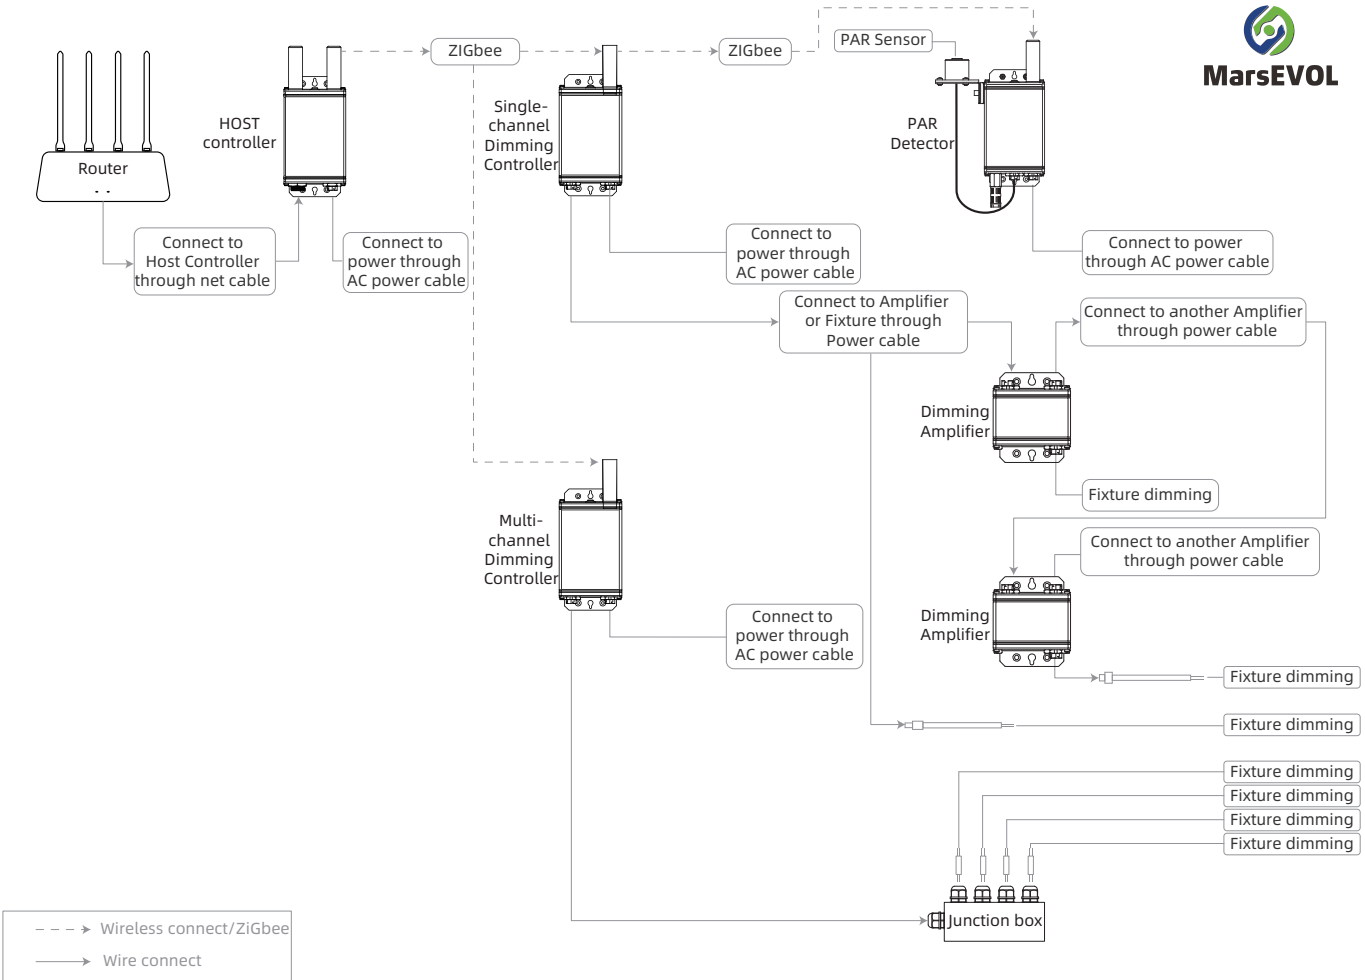



# MarsEVOL

LED-INNOVATION-PROFESSION

MarsEVOL LIGHTING



[www.marsevol.com](http://www.marsevol.com)



[info@marsevol.com](mailto:info@marsevol.com)